

BCT12 通信協定

Modbus RTU Address

Address	Code	Word	Function	Range
0000H	03/06H	1	Display indicate Line1	-19999 ~19999=B1E1~4E1FH
0001H	03/06H	1	-----	-----
0002H	03/06H	1	Dot point Line1	00 : X, XXXX 01 : XX, XXX 02 : XXX, XX 03 : XXXX, X 04 : XXXXX
0003H	03/06H	1	-----	-----

Meter Address=00H 時,為廣播模式,僅對 Function Code 06H 有效,但 Meter 不回應